


PLAN VIEW

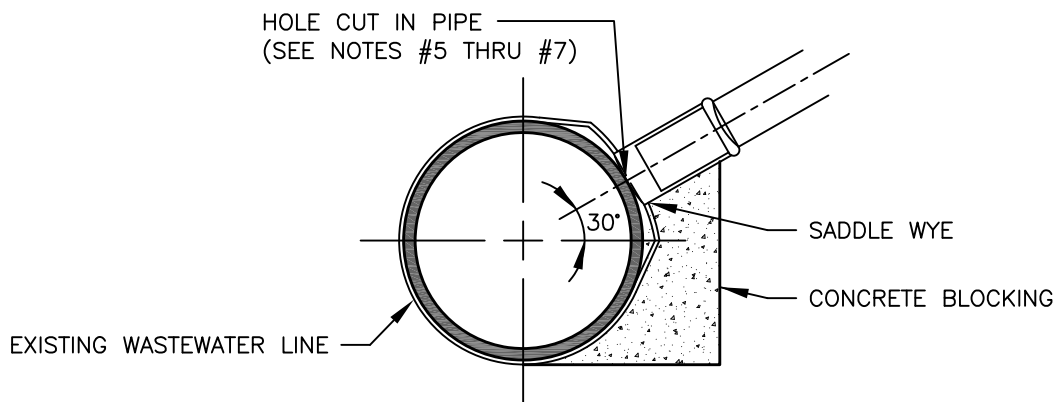

SECTION "A-A"

NOTES:

1. FLEXIBLE SADDLE TO BE INSTALLED IN ACCORDANCE WITH MANUFACTURER'S REQUIREMENTS.
2. EXCAVATE AROUND EXISTING WASTEWATER PIPE, EXPOSING SUFFICIENT ROOM FOR STAINLESS STEEL CLAMPS.
3. THOROUGHLY CLEAN AND DRY THE MATING SURFACE.
4. MARK THE SIZE OF THE HOLE TO BE CUT USING THE SADDLE ITSELF AS A TEMPLATE.
5. SAW OUT THE SECTION OF THE PIPE WHERE THE SADDLE WILL BE LOCATED, WITH A SABER OR KEY HOLE SAW. PIPE COUPONS SHALL BE REMOVED FROM EXISTING MAIN AND DISCARDED. PIPE CUTTINGS IN EXCESS OF 1" IN DIAMETER SHALL NOT BE LEFT IN EXISTING MAIN.
6. ENSURE SADDLE FITS HOLE PROPERLY.
7. PLACE GASKET SKIRT AND SADDLE OVER OPENING AND TIGHTEN BAND CLAMPS EVENLY UNTIL SADDLE IS FIRMLY ATTACHED TO THE PIPE. APPLY PRESSURE ON THE SADDLE AGAINST THE PIPE WHILE TIGHTENING THE CLAMPS AS INDICATED ABOVE. DO NOT OVER TIGHTEN AND DO NOT STRIP THREAD.
8. SERVICE PIPE SHALL BE INSERTED FULLY TO CONTACT SEAT FORMED IN FITTING.
9. REPLACE THE BEDDING AND BACKFILL IN ACCORDANCE WITH THE TRENCH EMBEDMENT DETAIL.

**RECORD SIGNED COPY
ON FILE AT U&ES DEPARTMENT**

APPROVED

03-01-18

DATE

THE ARCHITECT/ENGINEER ASSUMES
RESPONSIBILITY FOR THE APPROPRIATE
USE OF THIS DETAIL. (NOT TO SCALE)

CITY OF ROUND ROCK

**WASTEWATER LATERAL CONNECTION
TO EXISTING WASTEWATER MAIN
DETAIL**

DRAWING NO:
WW-16

